

AV SYSTEM CONTROLS

START

1. Switch system on (high level switch)

MAKING CONNECTIONS

2. Make wired connections (bottom box)
 - a. **HDMI** (one cable for both video and audio) or
 - b. **VGA** one cable for video only and/or
 - c. **Audio** (one cable 2 plugs)
3. Make **wireless (Bluetooth)** connection (audio from remote device)
 - a. Refer to “Bluetooth Music Receiver” (left-hand box)
(Note: red power light stays on permanently)
 - b. Set remote device to pair with “**Music BT01**”
 - c. If necessary press “**PAIRING**” button on box for 3 seconds
(Note: switch off Bluetooth on other paired devices)
(Note: if “Music BT01” does not show on device, restart device)
 - d. Set remote device to “connect” (blue light on box stays lit)
(Note: press “PAIRING” button for 3 seconds to break pairing)

AUDIO

4. Press “**AUDIO ON/OFF**” (middle box - button stays lit)
5. Press “**AUDIO ON**” (top box – button stays lit)
6. Microphone is now live: switch mic on and set system volume level
7. Select other input source as required (top box – button stays lit)
 - a. **BLUETOOTH** = wireless audio from remote device
 - b. **LINE-IN** = cable connection from laptop, mobile, CD player, etc
 - c. **HDMI** = HDMI cable connection which includes audio
8. Set volume controls (to mute source press another source button)
(Note: AV system volume should be set first for microphone)
(In general, keep device volume **high** and AV system volume level **low**)

AUDIO-VISUAL

9. Press “**PROJECTOR ON/OFF**” (middle box - buttons stay lit)
(screen comes down)
10. Press **HDMI** or **VGA** as required (best screen resolution: 1280x720)
(Note: HDMI connection may require restart)
11. Set audio controls (4-8 above)
12. Press **BLANK SCREEN** to blank video to the screen at any time

CLOSE DOWN

13. Press “**AUDIO ON/OFF**” (light goes off)
14. Press “**PROJECTOR ON/OFF**” (light goes off, screen rises)
Wait until screen is up
15. Switch system off (high level switch)

